




INSTRUKCJA MONTAŻU OKUĆ BOLZANO

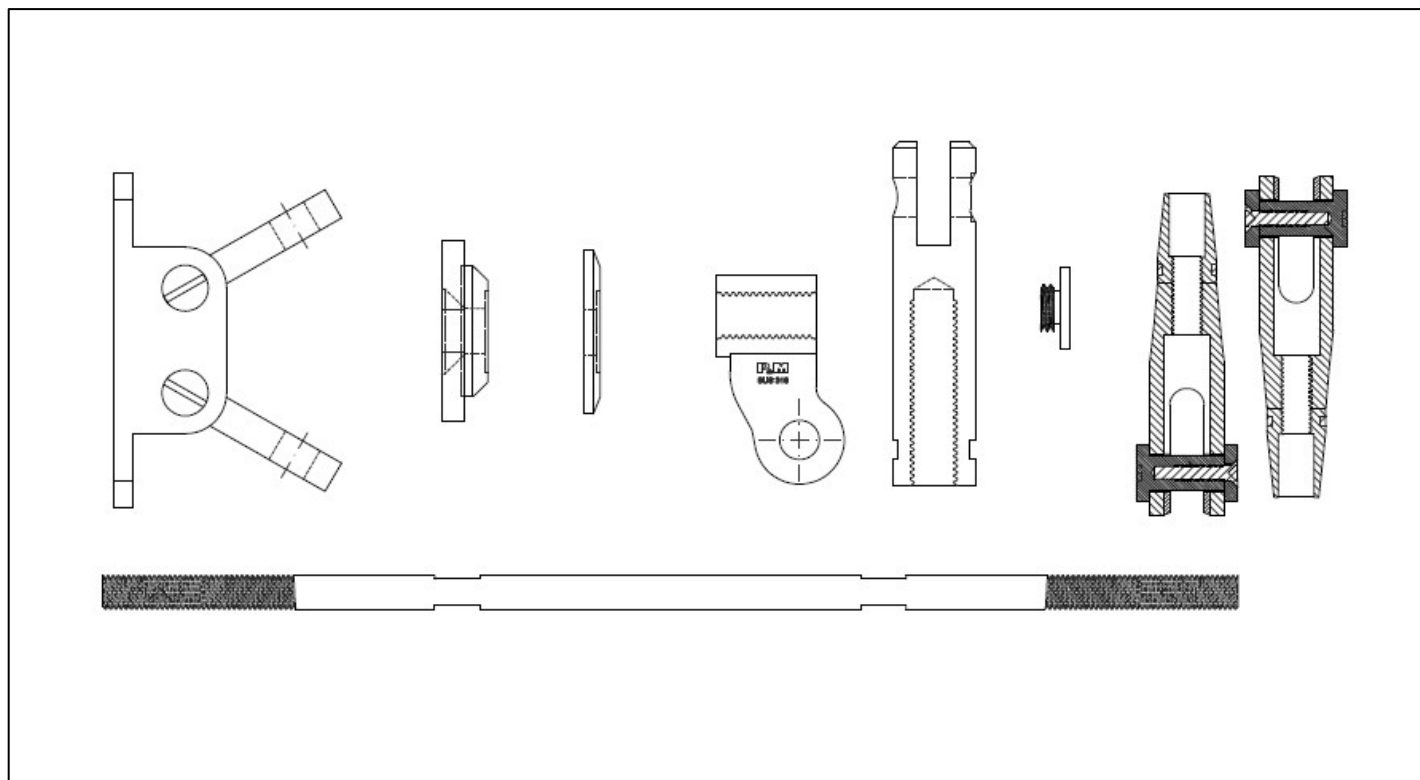


1.

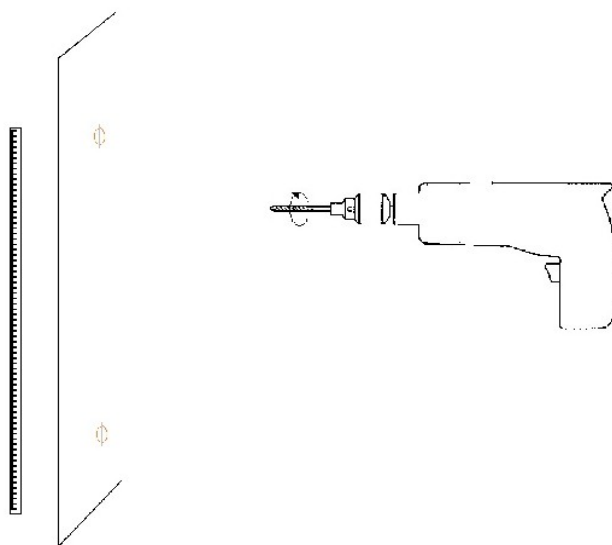


2.

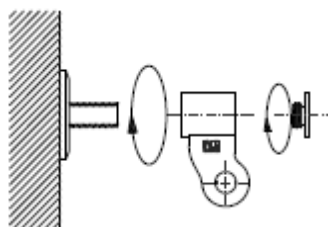


3.

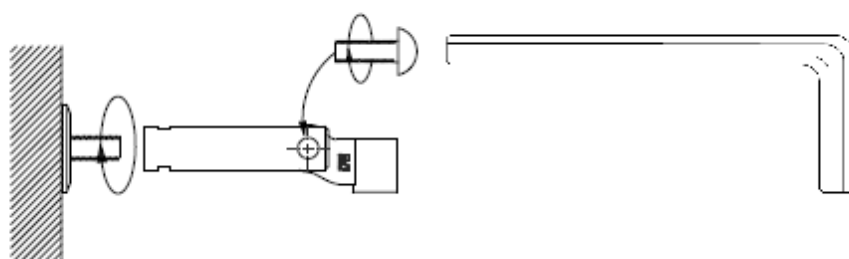


4.

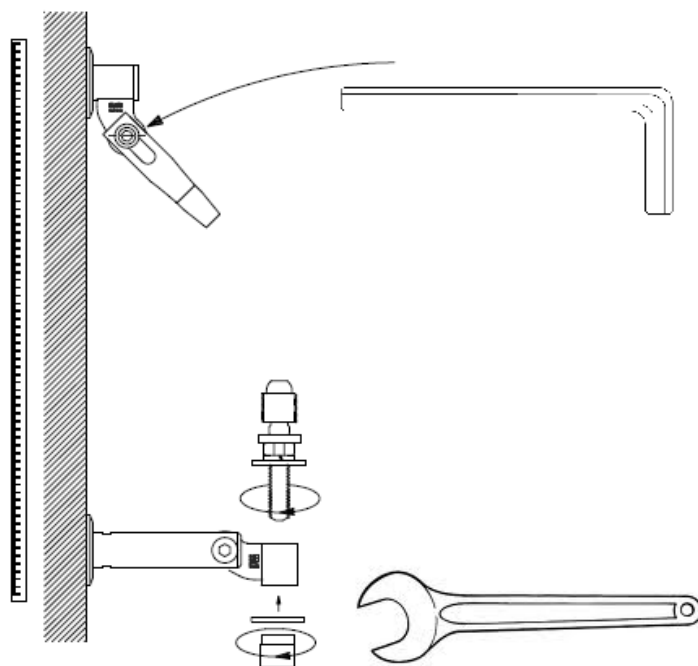


5.

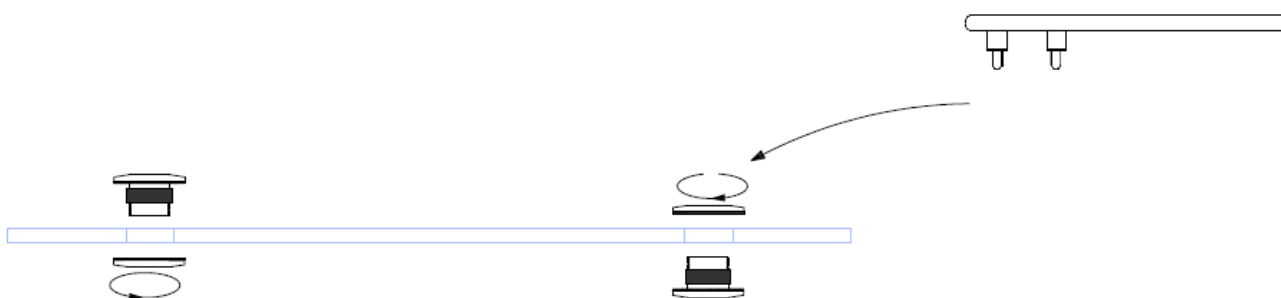


6.

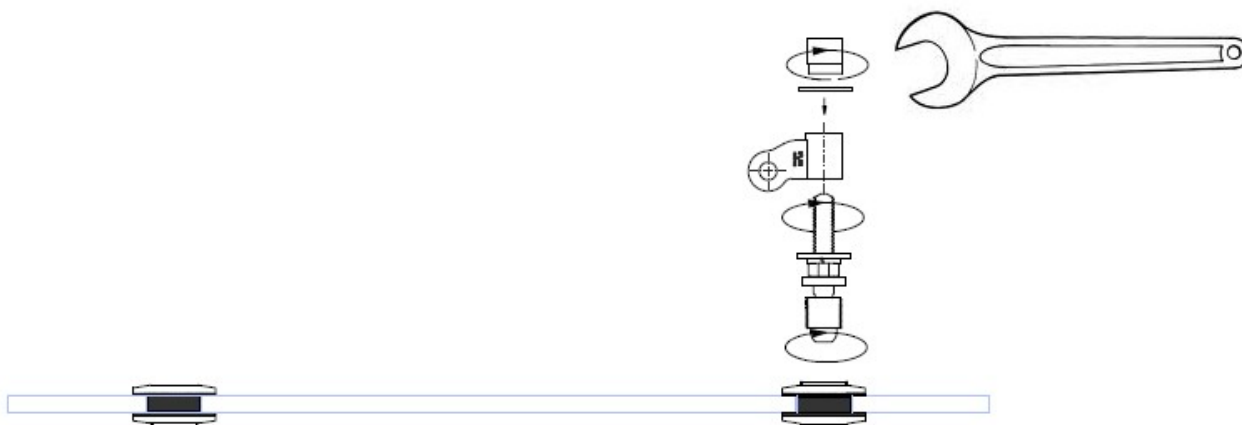


7.

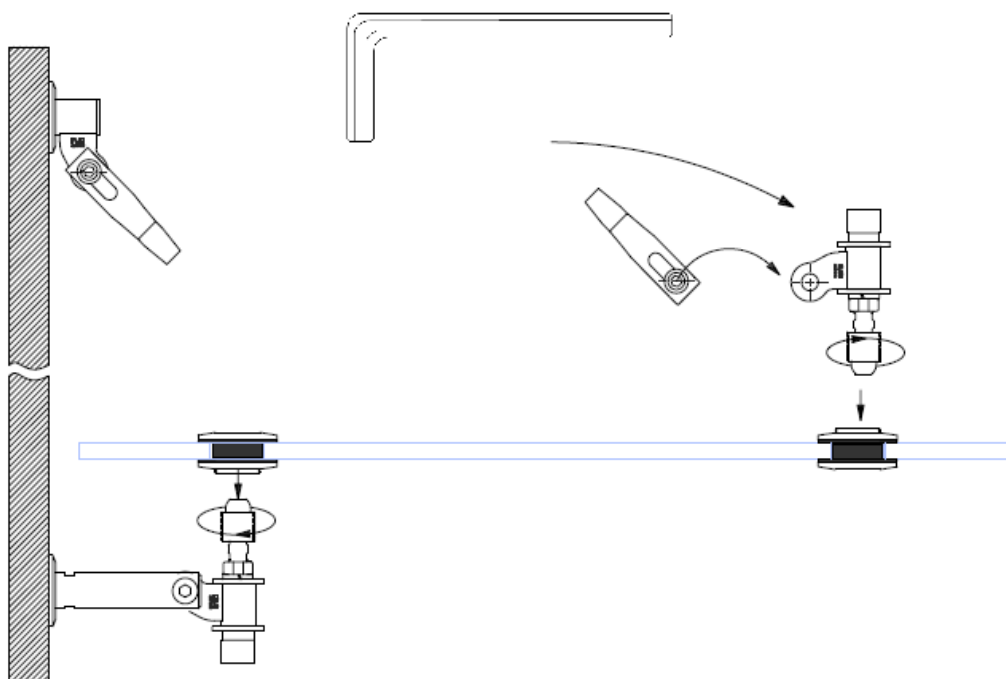

8.

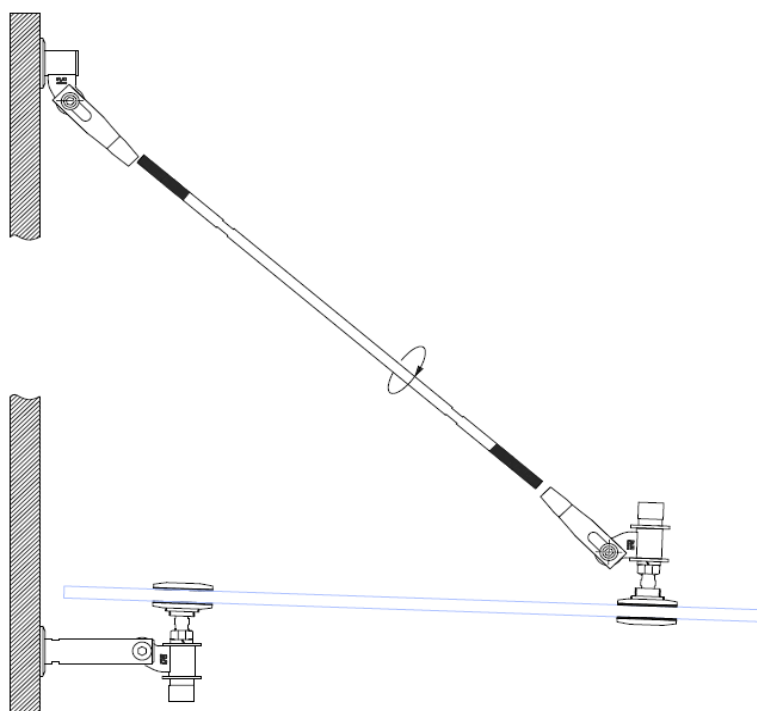

9

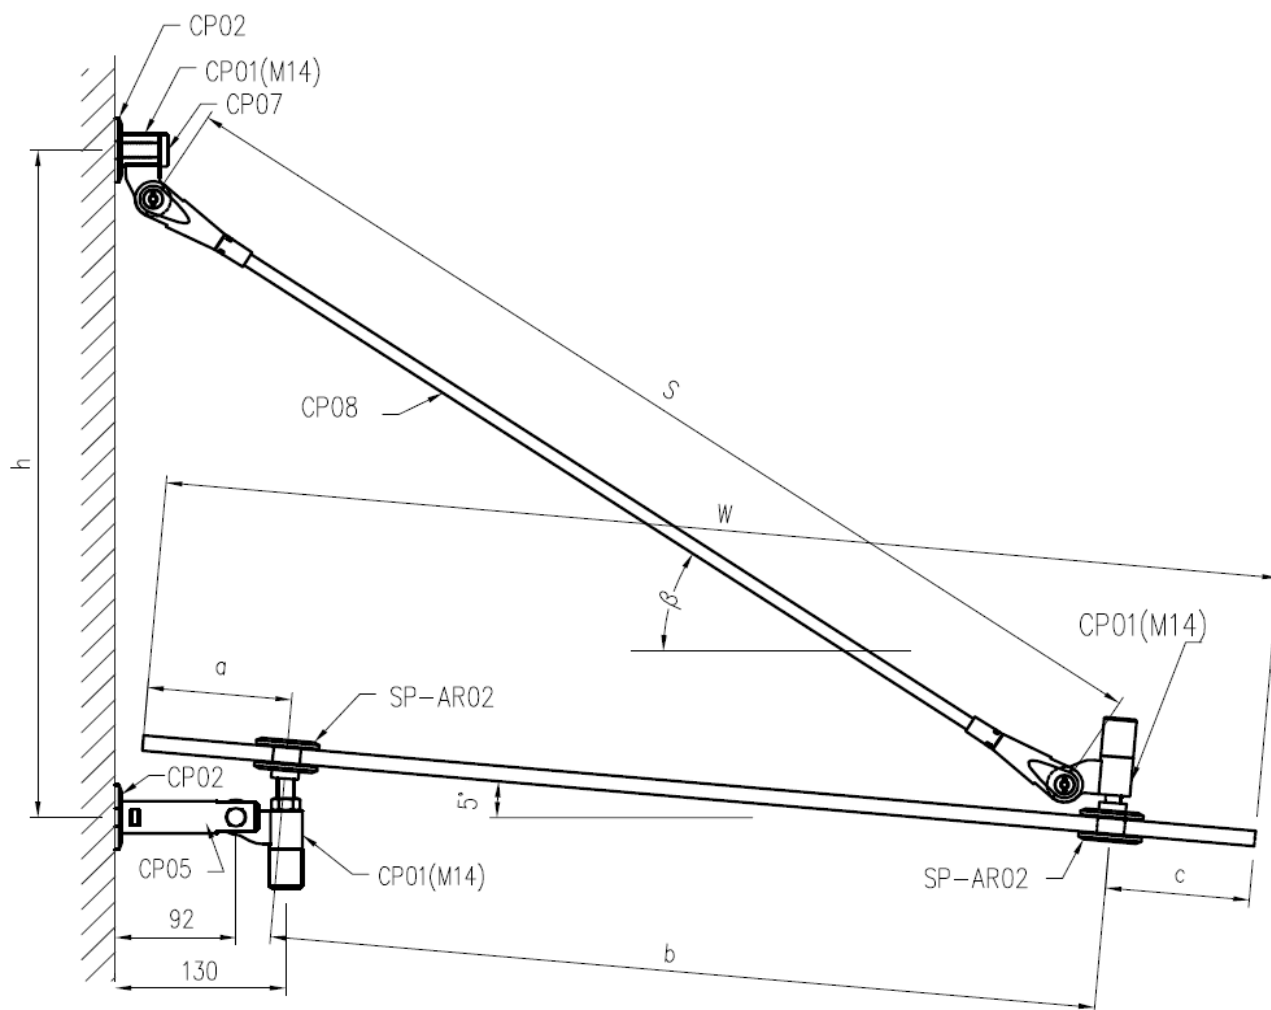

W	800	1000	1250	1500	1750
S	830	1025	1275	1500	1900
a	110	110	110	110	110
b	580	640	890	1090	1290
c	110	250	250	300	350
h	591	807	888	984	1341
β	39°	46°	42°	40°	45°

